

THE
SHARPER
IMAGE

ONE YEAR LIMITED WARRANTY

SI PRODUCTS sells its products with the intent that they are free of defects in manufacture and workmanship for the life of the original purchaser from the date of original purchase, except as noted below. SI PRODUCTS warrants that its products will be free of defects in material and workmanship under normal use and service. This warranty extends only to consumers and does not extend to Retailers.

To obtain warranty service on your SI PRODUCTS product, mail the product and your dated sales receipt (as proof of purchase), postpaid, to the following address:

SI PRODUCTS Consumer Relations
Service Center Dept. 168
3000 Pontiac Trail
Commerce Township, MI 48390
No COD's will be accepted.

SI PRODUCTS does not authorize anyone, including, but not limited to, Retailers, the subsequent consumer purchaser of the product from a Retailer or remote purchasers, to obligate SI PRODUCTS in any way beyond the terms set forth herein. This warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; improper installation; unauthorized repairs or modifications; improper use of electrical/power supply; loss of power; dropped product; malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance; transportation damage; theft; neglect; vandalism; or environmental conditions; loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair; or any other conditions whatsoever that are beyond the control of SI PRODUCTS.

This warranty is effective only if the product is purchased and operated in the country in which the product is purchased. A product that requires modifications or adoption to enable it to operate in any other country than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under this warranty.

THE WARRANTY PROVIDED HEREIN SHALL BE THE SOLE AND EXCLUSIVE WARRANTY. THERE SHALL BE NO OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS OR ANY OTHER OBLIGATION ON THE PART OF THE COMPANY WITH RESPECT TO PRODUCTS COVERED BY THIS WARRANTY. SI PRODUCTS SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES. IN NO EVENT SHALL THIS WARRANTY REQUIRE MORE THAN THE REPAIR OR REPLACEMENT OF ANY PART OR PARTS WHICH ARE FOUND TO BE DEFECTIVE WITHIN THE EFFECTIVE PERIOD OF THE WARRANTY.

NO REFUNDS WILL BE GIVEN. IF REPLACEMENT PARTS FOR DEFECTIVE MATERIALS ARE NOT AVAILABLE, SI PRODUCTS RESERVES THE RIGHT TO MAKE PRODUCT SUBSTITUTIONS IN LIEU OF REPAIR OR REPLACEMENT.

This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resold products, including but not limited to sale of such products on Internet auction sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express and written consent of SI PRODUCTS.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual regulations, some of the above limitations and exclusions may not apply to you.

For more information regarding our product line in the USA, please visit: www.siproducts.com

For service or repair - do not return this unit to the retailer.

Contact SI PRODUCTS Consumer Relations at 1-888-856-6781.

©The Sharper Image. All rights reserved. THE SHARPER IMAGE name and logo are registered trademarks.

©2009 THE SHARPER IMAGE and its affiliated companies, all rights reserved. THE SHARPER IMAGE is a registered trademark of THE SHARPER IMAGE and its affiliated companies.
All rights reserved.

IB-GRT300

THE
SHARPER
IMAGE

Beard and Mustache Trimmer



Instruction Manual and
Warranty Information

GR-T300

1 year
limited warranty

Look your best always.

Thank you for purchasing The Sharper Image® Beard and Mustache Trimmer. This product, along with the entire The Sharper Image collection, connects innovation with cutting-edge design to provide you with years of dependability and enjoyment. Look your best every day with the cleanest, neatest facial hair thanks to The Sharper Image Beard and Mustache Trimmer. Long-lasting razor-sharp blades and adjustable length comb allows you to shape and manicure your beard or mustache for a look that is uniquely you.

IMPORTANT SAFEGUARDS:

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER

- To reduce the risk of electric shock:

- Always unplug the appliance from the electrical outlet immediately after using and before cleaning.
- DO NOT reach for an appliance that has fallen into water. Unplug it immediately.
- DO NOT use while bathing or in the shower.
- DO NOT place or store appliance where it can fall or be pulled into a tub or sink.
- DO NOT place in or drop into water or other liquid.
- NEVER use pins or other metallic fasteners with this appliance.
- Keep dry - DO NOT operate in a wet or moist condition.

Caution: All servicing of this product must be performed by authorized SI Products Service Personnel only.

WARNING - TO REDUCE THE RISK OF BURNS, ELECTRIC SHOCK, FIRE OR INJURY TO PERSONS:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use and before putting on or taking off parts or attachments.
- Close supervision is necessary when this appliance is used by, on or near children, invalids or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by The Sharper Image; specifically any attachments not provided with the unit.
- NEVER operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return it to SI Products Service Center for examination and repair.
- Keep cord away from heated surfaces.
- NEVER drop or insert any object into any opening.
- DO NOT operate where aerosol (spray) products are being used or where oxygen is being administered.
- DO NOT operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock or injury to persons.
- DO NOT carry this appliance by the power cord or use cord as handle.
- To disconnect, turn all controls to the "off" position, then remove plug from outlet.
- This appliance is designed for personal, non-professional use only.
- DO NOT use outdoors.

SAVE THESE INSTRUCTIONS

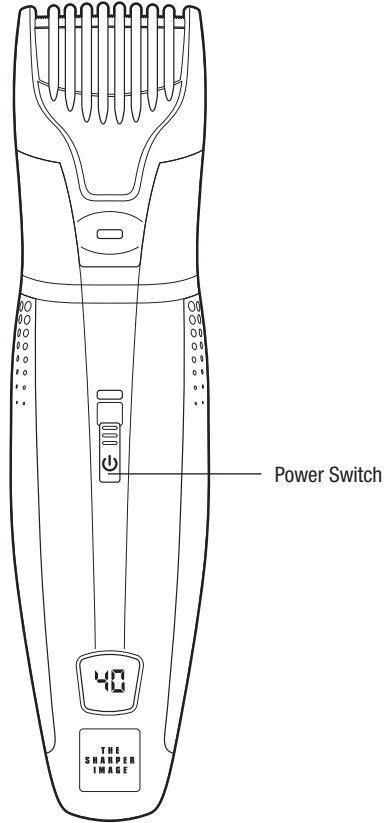


Fig. 1

Unique Features of Beard and Mustache Trimmer:

- Built-in hair collector – This product features a built-in vacuum function that stores hair clippings in a removable reservoir for easy disposal and no mess.
- No trimming attachments – length guard is built-in.
- Length Guard – Eight adjustable length guard settings allow you to trim your beard or mustache to a desired length neatly and evenly.
- Titanium coated blades – Titanium blades last longer without dulling and deliver clean cuts with less pulling.
- Cord or Cordless use – The Beard and Mustache Trimmer can be used as a cordless unit (by recharging) or with AC cord.

How to Use

Charging

Ensure the trimmer is OFF by sliding the power switch  into the down position.

- Connect the supplied AC adaptor cord to the bottom of the groomer and plug adaptor into a 120V outlet.
- For your convenience, the digital display shows the current battery run time.

Note: A minimum of 8 hours charging equals 40 minutes of cordless use.

Corded Use

Connect the AC adaptor cord to a 120V AC outlet and to the main unit respectively.

Time Remind Indication

The digital display will show the remaining time for operating and update the display minute by minute.

How to Use for Cutting

Before starting the cut:

- Make sure clipper is free from hair and debris.
- Before cutting, always comb hair so it is tangle free and dry.

To adjust the comb positions:

The adjustable comb offers 8 cutting depths from a 1/8 inch up to 1 inch.

- Press down on the adjustable comb button and push or pull to desired cutting depth.

Note: For even cutting, allow the adjustable comb/blade to cut its way through the hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum length of cutting depth.

Cleaning the hair collector

The hair trimmings are automatically drawn into the hair collector for easy disposal.

1. Switch the beard and mustache trimmer OFF. Unplug trimmer from outlet.
2. Hold the product upward to prevent hair from falling out; remove hair collector from trimmer by unsnapping from the bottom of trimmer body (Fig 2).
3. Remove the hair collector and empty hair clippings.
4. Replace the hair collector.
5. Now you are ready to trim your beard and mustache.

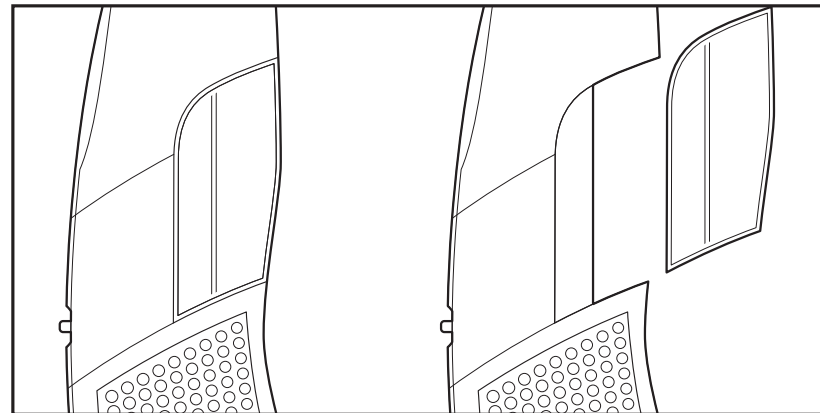


Fig. 2

Maintenance

To Store

You may leave the unit on display or you can store it in its supplied storage pouch in a cool, dry place.

To Clean

Use only a soft dry cloth to clean the enclosure of the unit. NEVER use liquids or abrasive cleaner to clean.