

# SHARPER IMAGE®

Ultrasonic Jewelry Cleaner

Item No. 200626



# INSTRUCTIONS FOR USE & SAFETY PRECAUTIONS

## FOR INDOOR USE ONLY

**IMPORTANT:** Before using the **Ultrasonic Jewelry Cleaner**, please read the following pages, including the specified safety precautions.

### FEATURES

- Professional-grade ultrasonic jewelry cleaning for the home
- Large 25-oz. (750ml) tank capacity
- Powerful 42,000Hz energy-producing sound waves per second
- Digital timer
- Auto shut-off
- 5 cleaning cycles: 90, 180, 280, 380 and 480 seconds
- Safely cleans most jewelry using tap water
- Bright blue LED illuminated stainless steel tank
- Auto-opening transparent evaporation-free cover
- Quiet solid-state circuitry
- Elegant black European contoured design with chrome accents
- Includes removable basket and bracelet/watch holder
- 50/60HZ
- One-year limited replacement warranty

## OPERATION

1. Unpack the Ultrasonic Jewelry Cleaner, basket and bracelet/watch holder from the box and plastic wrapping.
2. Connect to electrical power source. DO NOT turn the Ultrasonic Jewelry Cleaner on unless you have first filled up the tank with water.
3. To open the Ultrasonic Jewelry Cleaner transparent cover, press the crescent shaped gray button that is located above the LED digital display to automatically expose the tank and add the appropriate amount of water. Fill the solution level to the MAX fill line as clearly marked on the rear center portion of the stainless steel tank wall. DO NOT allow the water to evaporate below this level or fill the tank above this level, as damage may occur and the warranty will become void.

For tougher stains, dirt and grease add a SparklePak to the water (Item No. 200706, sold separately at [SharperImage.com](http://SharperImage.com)). You may also add a small amount of dishwashing soap with a degreasing agent.



DO NOT use flammable liquids, ammonia or acid/water mixtures in the ultrasonic tank as damage may occur and the warranty will become void. Keep the evaporation-free cover closed when not in use to reduce solution evaporation.

4. BEFORE CLEANING JEWELRY, READ THE SECTION “**What May & May Not Be Cleaned in an Ultrasonic Jewelry Cleaner**” (page 5). Place the item to be cleaned in the supplied basket and then submerge it in the tank and close the cover. (As a

suggestion, in the event small items such as diamond ear studs, charms or small pieces of jewelry require cleaning, a household stainless steel tea strainer or fine mesh stainless steel basket may be used to hold these items safely during the cleaning process, with the tea strainer then being placed in the supplied basket.) DO NOT place items to be cleaned directly on the tank bottom, as damage to the transducer may occur. Damage to the transducer as a result of placing items on the bottom of the tank will void the warranty. Dents and scars on the tank's bottom are evidence of items being placed inappropriately in the tank without a basket.

5. Press the POWER button to start the cleaning process. While on, press the TIMER button to scroll through the five cleaning cycle times of 90, 180, 280, 380 or 480 seconds. Once the cleaning cycle has ended, the Ultrasonic Jewelry Cleaner will automatically shut off. Items that require additional cleaning may be left in the basket within the tank and the process repeated. Once the cleaning process has been completed, always rinse the item off with water to remove the remaining solution (as it may irritate your skin) and to dislodge/remove any remaining loosened dirt from its surface. DO NOT place fingers or other body parts in the tank while the Ultrasonic Jewelry Cleaner is operating.

## **IMPORTANT: READ THIS SECTION BEFORE CLEANING JEWELRY**

### **“What May & May Not Be Cleaned in an Ultrasonic Jewelry Cleaner”**

Typically, items such as gold, silver, platinum, diamonds, rubies, sapphires, amethyst, citrine etc., are safe for ultrasonic cleaning. Be careful not to clean stones that may have many inclusions (example: emeralds), because the ultrasonic waves, heat or sudden change in temperature may crack the stone. Be certain not to clean soft, water porous stones (such as pearls, opals, turquoise, amber, ivory etc.) as they too may be damaged. For more specific information on which stones are suitable for cleaning in an Ultrasonic Jewelry Cleaner, we suggest you contact a professional jeweler, gemologist or The Gemological Institute of America (GIA).

Do not submerge watches in an Ultrasonic Jewelry Cleaner, as damage to the watch may occur. To clean metal watchbands, use the included holder which is designed for this function. Place the holder in the basket to prevent it from touching the bottom of the tank. Watches should be placed on the holder with the head/movement of the watch suspended above the water in the tank to prevent potential damage due to a possible poor water seal or gasket in the watch. Never place a non-waterproof watch in water or in this device, and only place the metal band of the watch in the water. At your own risk, before attempting this, always be certain the watch's stem is fully inserted and/or screwed all of the way in.

Clean the tank and change the solution regularly, but **ONLY** after first unplugging the Ultrasonic Jewelry Cleaner to avoid potential electrocution.

With the Ultrasonic Jewelry Cleaner unplugged, take the basket out of the tank and then grasp the ultrasonic with both hands and with the cover open, carefully pour out the old solution into your sink and drain. Wash all dirt and residue from the tank's bottom with clean water and a standard household non-ammoniated, non-acidic cleaning solution or stainless steel cleaner and a paper towel. Rinse the tank out with clean water while being careful not to allow water to overflow onto other parts of the machine as damage to its electronics may result and the warranty will become void.

The Ultrasonic Jewelry Cleaner's outer shell may also be cleaned using a standard household non-ammoniated, non-acidic, non-abrasive cleaning solution and a paper towel. After cleaning the outer shell, wipe off the remaining solution with clean water. Avoid placing too much cleaning solution on the outer shell as the excess solution may seep into the ultrasonic's electronics potentially causing damage. DO NOT submerge the Ultrasonic Jewelry Cleaner into water as damage to its electronics may result and the warranty will become void.

## WARRANTY

Congratulations on your purchase of the Sharper Image Ultrasonic Jewelry Cleaner. In the unlikely event of a defect in material or workmanship of the unit, your ultrasonic features a ONE YEAR LIMITED REPLACEMENT WARRANTY. This warranty is valid from the date of its purchase assuming the purchaser fills out the WARRANTY REGISTRATION FORM at [www.gemoroproducts.com/warrantyregistration](http://www.gemoroproducts.com/warrantyregistration) within 30 days of its purchase. If this criterion is not followed, the Ultrasonic Jewelry Cleaner will automatically be covered by a 90 DAY LIMITED WARRANTY from the date your ultrasonic was purchased, as noted on the bill of sale (if supplied) or through the Ultrasonic Jewelry Cleaner serial number tracking system as interpreted by the factory. In the event your Ultrasonic Jewelry Cleaner is no longer available or has been discontinued and warranty coverage is applicable, at the factory's sole discretion, an equivalent Ultrasonic Jewelry Cleaner may be substituted in place of the defective unit. The purchaser shall incur the cost for return postage, insurance and handling for all warranty and non-warranty repairs. Warranty repairs and/or replacements will be shipped back to the customer FOB Destination to the location of the customer's choosing if within the Continental United States (U.S.). Non-warranty repairs will be shipped back to the customer FOB Factory. Should the customer require the repair and/or replacement unit(s) to be shipped outside the Continental U.S., the customer will be required to pay any related shipping charges and any related taxes/duties for the respective destination country, regardless whether it is a warranty or non-warranty claim.

IMPORTANT DISCLAIMER: No warranties exist with respect to the Ultrasonic Jewelry Cleaner or its use other than those expressly contained herein. All other warranties of any kind or character whatsoever, whether expressed or implied, including warranties of merchantability or fitness for a particular purpose, are hereby disclaimed and are excluded from the warranties hereunder. In the event that a claim is made with respect to the Ultrasonic Jewelry Cleaner or its use, the maximum liability of GemOro, and its affiliates, dealers and distributors shall be the amount paid for the Ultrasonic Jewelry Cleaner.