



ZPFS1-DVD

Flash to DVD Slim Drive Copier

Users Guide (Rev 3.1)

Table of Contents

Chapter 1 Quick Start Guide

Chapter 2 Product Information

Chapter 3 Control Panel

Chapter 4 Menu Overview

Quick Start Guide

Step 1: Plug in power cord

Step 2: Turn on power switch

(I = on o = Off)




Step 3: Open Drive and insert blank CD or DVD. Then close the drive.



Eject/Close Button

Step 4: Next, insert USB, SD Card or Compact Flash into appropriate slot.



Step 5: Press the  (OK/enter button) That's all!! Your Copier will do the rest and eject the copied disc in a few minutes automatically.



Product Introduction

Thank you...

...for choosing the **ZipSpin ZPFS1-DVD Standalone** Copying system.

The **ZipSpin ZPFS1-DVD** is a stand-alone Copier that requires no computer connection to operate. Low cost and high performance, the **ZPFS1-DVD** will fulfill your duplication, and back up requirements.

Specifically designed for home and office applications, the **ZipSpin ZPFS1-DVD** copier is based upon a “one touch” controller with a large LCD display and simple 3 button navigation, which make steps easy to follow during the copying process. Should you encounter any difficulty, please contact us for assistance.

We strongly suggest you locate your **ZipSpin ZPFS1-DVD** in a dust free environment. Dirty discs may cause duplication rejects or even total failure.

For recordable media selection, we recommend you choose high-speed rated and certified brand name discs (i.e. Sony, Taiyo Yuden, Fuji, Pioneer, Maxell, etc.) and make sure to reserve some discs for possible troubleshooting issues in the future. Under no circumstance does **ZipSpin** encourage users to duplicate copyrighted or copy-protected materials.

Supported Formats: DVD-R/RW/RAM/DL, DVD+R/RW/DL, CD-R/RW


Supported Burning Speed: DVD up to 8X, CD up to 24X

Supported Flash Data: FAT16 / FAT 32

PDE Technology Corporation
www.pdetechology.com
11522 Markon Drive
Garden Grove, CA 92841

Tech Support Line 714-892-8212 (M-F 9 to 5 pm PT)
Tech Support Email support@pdetechology.com

System Overview

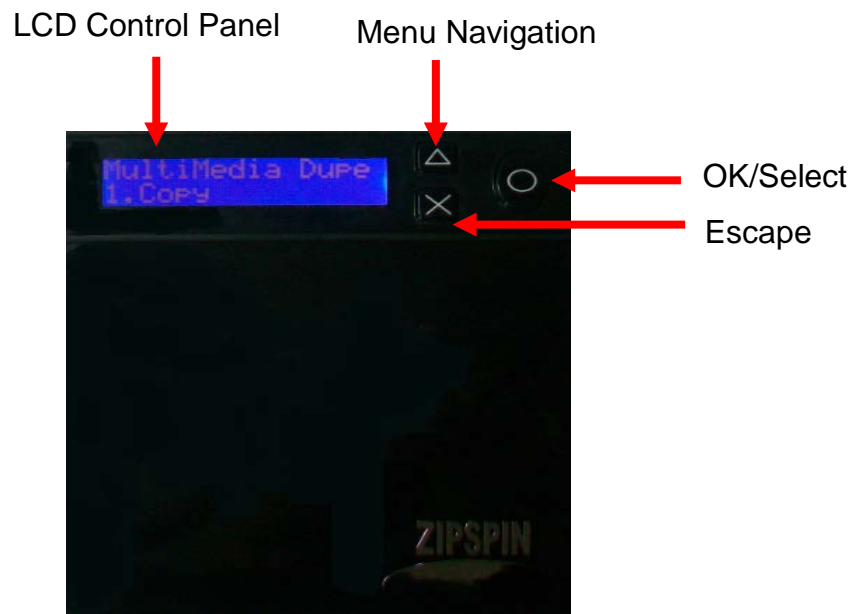

Control Panel Overview

There are 3 control buttons:



X Escape Button: Cancel, Go back to previous function

△ Menu Navigation Button: moves up or down in the menu to select desired function

○ OK Button: enter, execute the function selected

Source Slots:



SD Card

USB

Compact Flash



Menu Overview

1 **COPY:** Copy content from SD Card, USB, CF or Direct form your Camera.

1.1 **COPY**

Insert a Source USB/SD/CF Card into appropriate slot



Insert your Blank Disc into the disc drive and close the drive.



Press Enter



A successful copy will automatically eject.

1.2 **Multi-Session Copy**

If your data is smaller than the capacity of the disc, the system will perform a multi-session copy and allow you to put more data on the same disc if you choose to do so.

1.3 **Disc Spanning Copy**

If the data size is larger than the capacity of the disc the system will automatically divide the files into multiple discs and will prompt you as to when you should insert a new blank disc.

- 2 **USB/Card Information:** Shows USB /Card information including data size, capacity, and File Quantity
- 3 **Disc Info:** Shows Disc Information including Disc Type, Support Burn Speed and Data size.
- 4 **Utility**
 - 4.1 Disc to Disc (use this function to make a disc to disc copy)

[Utility]
1. Disc to Disc

Insert a blank/empty USB or SD Card into appropriate slot



Insert your Master Disc into the disc drive.



Press Enter 

CLEAR USB/SD/CF
<Select> Confirm

Press 

CLEAR USB/SD/CF
<OK> Key Confirm

Press Enter 


Wait Blank Disc

Remove the master disc and insert a blank disc.

The system will begin writing the content to the blank disc and eject when complete.

**Write Disc
Finished!**

Insert as many blank discs as you like and the system will continue to make duplicates of that original master disc.

When you are done making copies of the Master disc, press Enter  to go back to the Menu.

4.2 **System Info**: Shows Current Firmware version.

4.3 **Update System**: The system will automatically find the Update file on the on the Disc or USB drive you insert and complete all updates.

5 **Setup**

5.1 **Set Compare**: Provide information about READER drive (manufacturer, model number and firmware version)

5.2 **Set Time Zone**: Setup appropriate time zone

5.3 **Language**: Select Menu language

If you are unable to solve any technical problems, do not return the unit. Please call 714 892- 8212 or email us at support@pdetechnology.com