

## Important Safety Instructions

Read all safety instructions before operating instructions.

Read all safety instructions and operating instructions before attempting to use this appliance/shaver.

Do not use this appliance/shaver if you do not understand and agree to comply with the following

### DANGER

To reduce the risk of electric shock:

- Do not reach for this appliance if it has fallen into water. Unplug immediately.
- Do not drop or place this appliance into water or other liquid while it is plugged in to an electrical source.
- Do not store or place this appliance where it can fall or be pulled into a tub or sink while it is plugged in.
- Always unplug and turn off this appliance before cleaning it.

### WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- Only use this appliance for its intended household use as described in this manual.
- This appliance should never be left unattended while plugged in to power source.
- Before using this appliance, inspect the appliance and its attachments in detail to determine if there is any damage. If there is any damage, do not use this appliance. Damaged parts could cause injury and harm to your skin, hair or other areas.
- Do not attempt to repair or disassemble this appliance.
- Never operate this appliance if it has a damaged cord or plug, if it is not working as intended, damaged or previously dropped into water or has come into contact with water.
- Never drop or insert any object into this appliance's openings.
- Do not use any attachments or other parts not recommended by MANGROOMER.
- Do not place or store this appliance where it can fall or be pulled into a sink or tub.
- This appliance must always be stored in a moisture free area.
- Do not use while bathing or near any water source.
- Do not place in, or drop into water or other liquid.
- If this appliance falls into water, unplug it immediately. Do not reach into the water.
- Never store this appliance in temperatures exceeding 140 degree F (60 degrees C).
- Do not store this appliance in a hot or humid room, a short circuit or electric shock may occur.
- Never place or store this appliance or any attachments by heated surfaces or other appliances.
- Keep the cord away from heated surfaces and do not pull, twist, or wrap cord around the appliance.
- Never use an unauthorized source of power to operate this appliance.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- This appliance should not be used by, on, or near children or invalids.
- This appliance is for use on human hair only. Do not use for any other purpose.
- This appliance and attachments may become very hot while in use. Therefore, please allow this appliance to cool before handling and with extreme caution at all times.
- Never use this appliance while sleeping.
- While operating this appliance, never place on any surface.
- Never use an extension cord to operate this appliance.
- Never use this appliance with a voltage converter.
- Unplug appliance immediately after use.
- Do not attempt to clean this appliance with any thinners, benzene, alcohol or any other potentially harmful cleaning agents. They may severely damage or discolor the unit and may also be potentially harmful to your person as well.
- Use this appliance only for its intended use as described in this manual. Any results, malfunctions or injuries caused by the use of the appliance other than its intended use will be solely the responsibility of the purchaser and or user.

## SAVE THESE INSTRUCTIONS

MANGROOMER® would like to thank you for purchasing our new Ultimate Pro Body Groomer. Our goal is to provide you with the most cutting edge and innovative male grooming products available.


### OPERATING INSTRUCTIONS

Read all safety instructions and operating instructions before attempting to use this appliance/shaver/trimmer/groomer.

#### BEFORE OPERATING YOUR APPLIANCE / ULTIMATE PRO Body Groomer

- The intended areas of use should be visually inspected in great detail before attempting to use this appliance.
- Always make sure the intended areas of use are completely clean and dry before attempting to use this appliance.
- If you have any medical problems, irritation, rashes, signs of blood or discomfort in your intended area of use – do not attempt to use this appliance.
- Use of a handheld or wall mirror will help you identify most problematic areas of hair growth.
- Do not use this appliance to shave or trim any facial or scalp hair. This appliance was created for shaving below the neckline only.
- Heavy growth and problematic areas will need several attempts to efficiently remove all hair. Results will vary among different individuals.
- Do not move the appliance quickly or aggressively while in use.
- Never press hard or with force against the appliance into the intended area of use.
- At any time, if any irritation or discomfort arises – discontinue use immediately.

Once you are completed with operating the appliance – turn the appliance off by pressing the ON/OFF button to the OFF position.

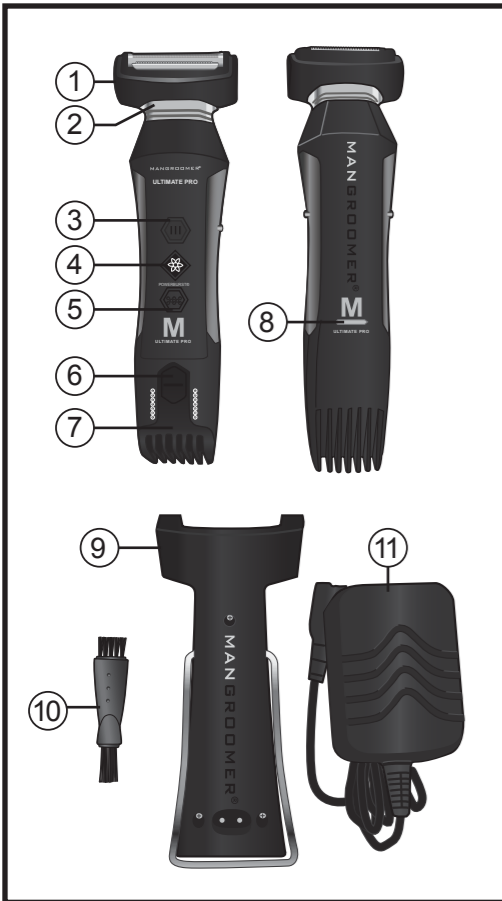

- 1) SHAVER HEAD
- 2) SHOCK ABSORBER MULTI-FUNCTIONAL PIVOTING NECK AND HEAD
- 3) SHAVING HEAD ON/OFF BUTTON
- 4) POWER BURST BUTTON
- 5) TRIMMING HEAD ON/OFF BUTTON
- 6) HEXAGON LENGTH SETTINGS ADJUSTMENT BUTTON
- 7) TRIMMER HEAD
- 8) BATTERY CHARGING INDICATOR LIGHT
- 9) CHARGING STAND
- 10) CLEANING BRUSH
- 11) POWER ADAPTOR AND PLUG

#### CHARGING YOUR APPLIANCE / ULTIMATE PRO Body Groomer

- Make sure both the shaver, charging power cord, charging stand and your hands are dry before attempting to charge this appliance.
- Always charge this appliance in a cool, dry location.
- Never allow charging power cord or stand to be near water or by any possible place it could be submerged into water.
- Never operate appliance near a water source while charging power cord or charging stand is in contact with appliance.
- Plug charging power cord into base of stand and open stand to upright standing position. You are now ready for charging.




- Place your shaver in the charging stand with back of the shaver facing outward, so you will see the charging indicator light. The charging indicator light will illuminate once correctly positioned in the stand and charging begins.



- Please charge shaver for 18-24 hours before initial use. Recharges will be completed quickly after initial charge. Estimated 2-3 hours for recharges.
- The charging light on your appliance will light in RED color when charging is taking place and not at full capacity.
- When charging is complete to full capacity, the charging light on your appliance will light in GREEN color. You are now ready for shaving.
- Bonus feature: Please note that during operation your shavers charging light will turn YELLOW color when battery power is getting low and a recharge is needed.
- To preserve the life of the batteries, let them fully deplete every six months and then fully recharge them to full capacity.
- Do not charge for more than a 24 hour period to help maintain battery life.

#### PREPARE TO OPERATE YOUR NEW APPLIANCE/ULTIMATE PRO Body Groomer

- Only use this appliance for its intended household use as described in this manual.
- To trim or shave your body hair in the most effective and efficient way, shave against the natural direction of hair growth.
- The direction of hair growth will vary for all individuals and on all different areas of the body. Therefore, changing angles and directions of shaving will help you learn and with practice, enable you to achieve optimum results.

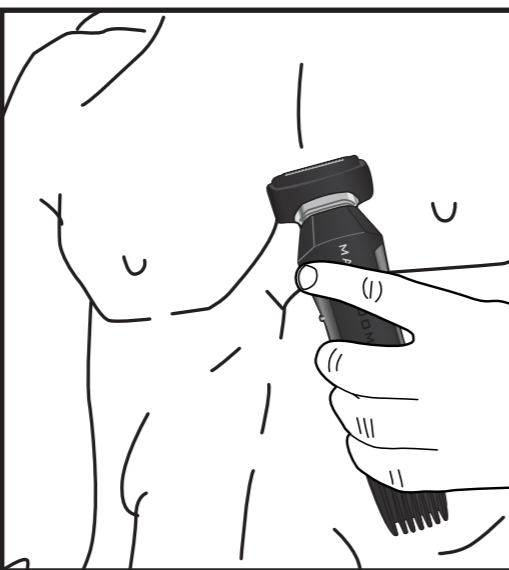

- Never shut the appliance off while shaving or trimming and only turn the appliance off while being held away from body areas.
- For best results, shaving and trimming are recommended when both skin and hair are dry.
- Your skin may need several weeks to adjust to an electric shaver. Once your skin adjusts, you'll get an extremely close and perfect shave.
- Before using this appliance, always inspect the unit, blades and foil to ensure no damage has occurred. If any damage has occurred, please do not use and replace the damaged component.


#### ULTIMATE PRO Body Groomer – SHAVING HEAD OF GROOMER

##### SHAVING WITH YOUR NEW APPLIANCE / ULTIMATE PRO Body Groomer

- Only use this appliance for its intended household use as described in this manual.
- Shaving should always be done slowly and carefully, as you do not want to pull any hairs. The longer the hairs, the more apt it is to have pulls. Therefore, BEFORE USING BODY GROOMER SHAVING HEAD, ALWAYS TRIM LONGER HAIRS WITH TRIMMER SIDE OF SHAVING FIRST TO CREATE SHORTER STUBBLE.
- Power on shaver side of ULTIMATE PRO by pressing power ON/OFF button closest to desired head.




- Move the shaver across your intended area while attempting to keep the entire surface area of shaver foil in contact with the skin.
- Your ULTIMATE PRO Body Groomer has incorporated in the use of a PRO shock absorber multi-functional pivot neck and head for complete range of motion and complete comfort in all shaving areas. This advanced technology will enable more direct contact with the blade and thus, a better shave.

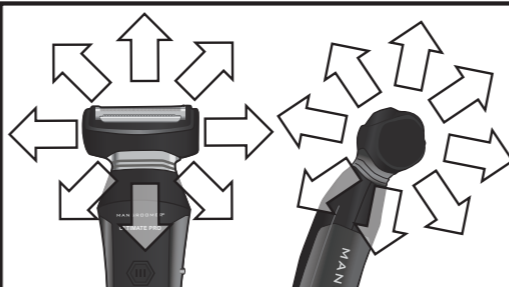

- Always use a light touch when shaving. Pressing hard or with excessive force will only flatten your hair out and make it harder for longer hairs to enter the trimming blade in front of foil and be shaved.



- Your ULTIMATE PRO is equipped with a 2 sided trimmer blade to enable you to obtain optimum results and shave in either direction you desire. In different areas of the body, it will be easier to push rather than pull for best results and vice versa.

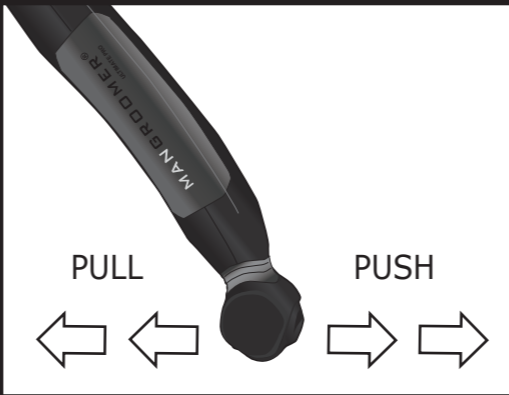

- Once you completed shaving – turn the appliance off by pressing the ON/OFF button to the OFF position.




#### ULTIMATE PRO Body Groomer – TRIMMING HEAD OF GROOMER

##### TRIMMING WITH YOUR NEW APPLIANCE / ULTIMATE PRO Body Groomer

- Only use this appliance for its intended household use as described in this manual.
- Trimming should always be done slowly and carefully, as you do not want to pull any hairs. The longer the hairs, the more apt it is to have pulls. Therefore, BEFORE USING BODY GROOMER TRIMMER HEAD, ALWAYS TRIM LONGER HAIRS ON HIGHER SETTING FIRST TO CREATE SHORTER HAIR LENGTH.
- Trimming of hair is always recommended to be done dry for optimum results. Water will matt down hair, therefore the trimmer should not be used while hair is wet.
- With the front of appliance facing you, adjust the trimmer side adjustment comb to your desired length. Gently press in on the hexagon adjustment button sliding the comb outward from the unit for longer lengths. The higher the number, the longer the trimmer setting and vice versa. Once the button is released, the trimming setting will remain locked at the setting until pressed again.



- We recommend starting at a higher trimming length setting and going lower until you achieve your desired length.
- To trim or shave your body hair in the most effective and efficient way, shave against the natural direction of hair growth.
- Power on trimmer side of ULTIMATE PRO by pressing power ON/OFF button closest to desired head.

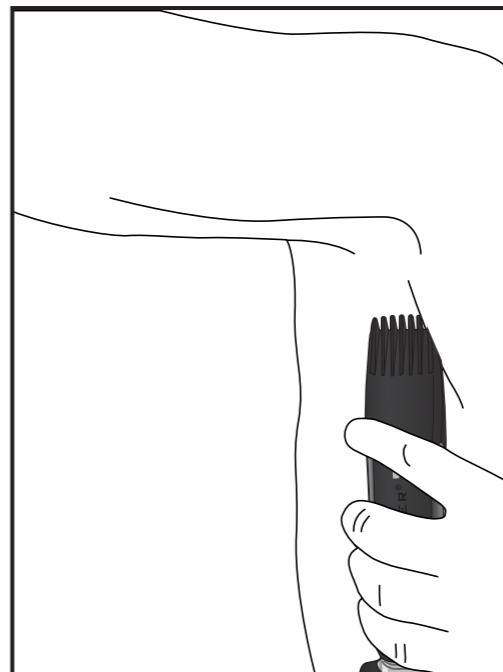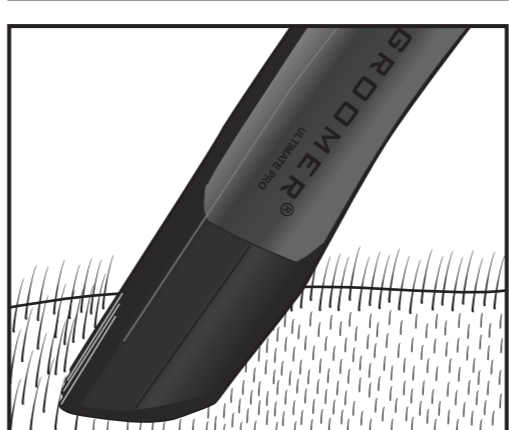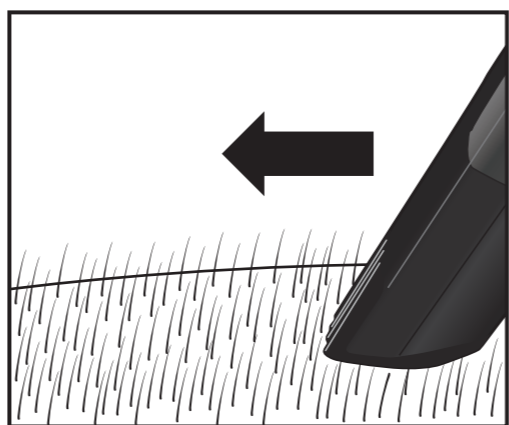

- The direction of hair growth will vary for all individuals and on all different areas of the body. Therefore, changing angles and directions of shaving will help you learn and with practice, enable you to achieve optimum results.
- Once you completed trimming – turn the appliance off by pressing the ON/OFF button to the OFF position.

#### POWER BURST® BUTTON


- For coarse and thicker areas of hair, press the POWER BURST® button in the middle of the ULTIMATE PRO Body Groomer for both higher power shaving and trimming. (See diagram below).




- The POWER BURST® button works for both the shaving and trimming functions and can be deployed easily by just pressing the button during operation.
- Heavy growth and problematic areas will need several attempts to efficiently remove all hair. Results will vary among different individuals.
- Once the appliance is turned off, your settings will go back to normal and therefore, you will need to press the POWER BURST® button again to operate this function during your next use.

#### CLEANING, MAINTENANCE AND STORAGE

- Clean this appliance after every use.
- Be sure appliance is turned off and unplugged from its charging power cord and base before attempting to clean.
- After each use, blow any remaining hair from the trimmer blades and outer foils.
- For even more intensive cleaning of the foil shaving blade, remove the foil shaving blade by: with shaver facing you in both hands, gently pull upward on the foil unit, blow or brush out any remaining hairs and replace doing the reverse.

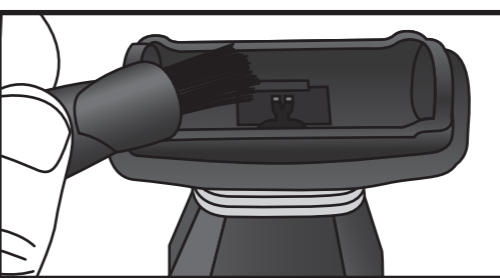


- For even more intensive cleaning of trimmer blade, remove the trimmer blade by: removing the trimmer comb completely from unit exposing trimmer blade, gently push upward under the trimmer blade with your thumb until blade releases, blow or brush out any remaining hairs and replace doing the reverse.

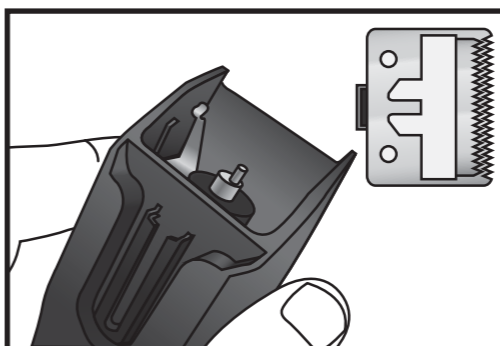


- When not in use, always store the ULTIMATE PRO Body Groomer in a safe, clean and dry environment.

#### RECHARGEABLE BATTERY REMOVAL

- When this appliance is deemed no longer useful, the batteries must be removed from the shaver and recycled or disposed of properly in accordance with your state and local requirements.
- Operate your appliance until no power remains and ensure your appliance is turned OFF.
- Remove the trimmer comb completely from unit exposing trimmer blade, then gently push upward under the trimmer blade with your thumb until blade releases and remove from unit.
- 2 screws will now be visible and unscrew these top 2 screws of the appliance with a Phillips head screwdriver.

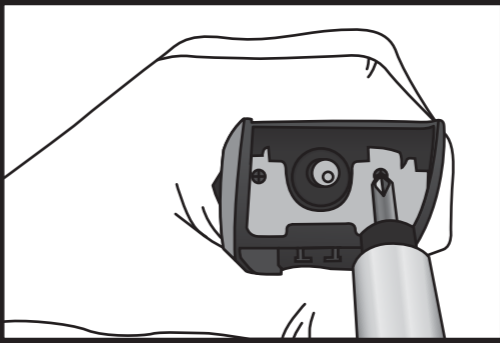

- Once removed, pull out metal cage.
- Gently pry each side panel section apart from main body of appliance without excessive force and remove.

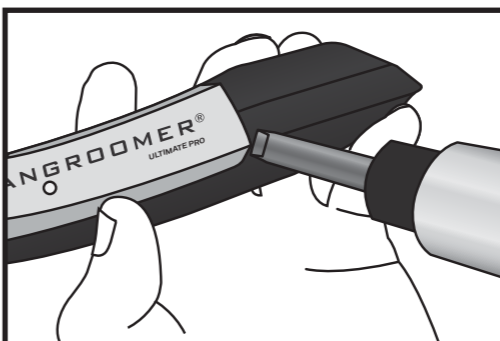

- On the upper back of appliance, use a screwdriver to remove the remaining 2 screws.
- Pull apart the front and back of appliance main body to open and expose the inner circuit board and remove from the inner frame of the main body.
- Once this is removed, you will now be able to separate the inner frame and its components of the shaver from its outer shell with a screw driver by gently prying each section apart from one another without excessive force.
- Once the inner frame and its components are removed, you will have both the batteries and circuit board available.
- Dispose of the circuit board and batteries in accordance with your state and local requirements.

MANGROOMER®

MAINTAIN YOURSELF®

## OPERATING AND SAFETY INSTRUCTIONS



### ULTIMATE PRO BODY GROOMER

**CAUTION:** DO NOT PUT IN FIRE OR MUTILATE YOUR BATTERIES WHEN DISPOSING AS THEY MAY BURST AND RELEASE TOXIC MATERIALS. DO NOT SHORT CIRCUIT AS IT MAY CAUSE BURNS. DISPOSE OF PROPERLY IN ACCORDANCE WITH YOU STATE AND LOCAL REQUIREMENTS.



#### PERFORMANCE GUARANTEE

##### FULL 2 YEAR WARRANTY

Marut Enterprises, LLC warrants this product against any malfunctions, flaws or defects that are due to faulty material or workmanship for a 2 year period from the original date of purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become malfunctioning or defective within the warranty period, we will repair it or elect to replace it free of charge. If this applies to you, please return your product with your original sales receipt as well as your name, address and phone number where you may be contacted. Please return to the following address:

Marut Enterprises, LLC  
P.O. BOX 1757  
Santa Monica, CA 90406  
United States

For additional information please email or call:

sales@mangroomer.com  
or  
1-800-462-9596

"POWER BURST®"

"THE FUTURE OF MEN'S GROOMING®"

"MAINTAIN YOURSELF®"

COPYRIGHT 2013 Marut Enterprises, LLC  
All Rights Reserved.

Manufactured for: Marut Enterprises, LLC  
P.O. BOX 1757  
Santa Monica, CA 90406

