



Replacement Part Instruction Sheet

HOW TO REPLACE IONIZER WIRE

1. Carefully remove broken Ionizer Wire assembly, including top and bottom retainer ball and tension spring. It's possible the top retainer ball or tension spring may have fallen into the handle. Make sure to remove prior to replacing the Ionizer Wire. (Fig. A)
2. Place the new wire with tension spring end into the top slot of the filter (handle side). (Fig. B)
3. Carefully stretch the wire down to the bottom slot and place the retainer ball into the bottom slot. (Fig. C)
4. Check to make sure retainer ball is fully in the slot. Then reinstall filter assembly into the Air Purifier.

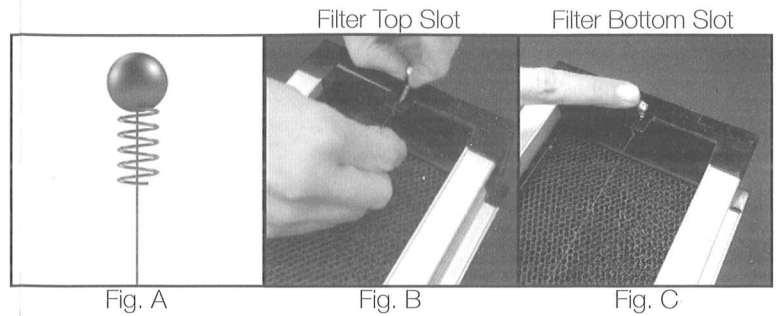

Pre-Filter

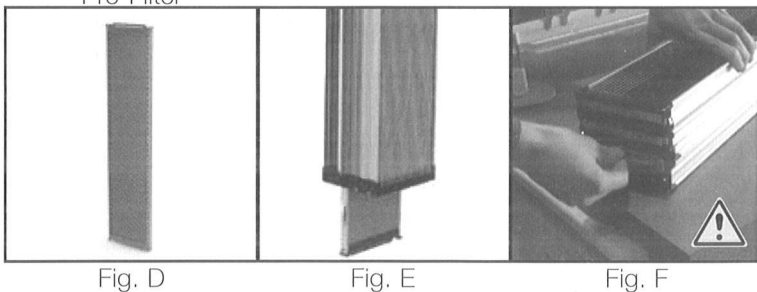

HOW TO INSTALL PRE-FILTER (Fig. D)


1. Insert pre-filter (with brown handle) into the bottom of the filter assembly. Both ends of the pre-filter are exactly the same and can be installed either way. (Fig. E)
2. The pre-filter should fit flush with the bottom of the filter. (Fig. F)
3. **Never run the Air Purifier without an installed pre-filter**

HOW TO INSTALL NEW FILTER



DO NOT rub your fingers or hand along the stainless steel Filter Plates - THE EDGES ARE SHARP!

1. The new filter assembly does not come with a pre-filter. Look for the brown handle of the pre-filter on the old filter assembly and remove. (Fig. G)
2. Insert the old pre-filter into the new filter assembly. Both ends of the pre-filter are exactly the same and can be installed either way. Never run the Air Purifier without an installed pre-filter. (Fig. H)
3. Insert the filter assembly with pre-filter into the Air Purifier unit. (Fig. I)

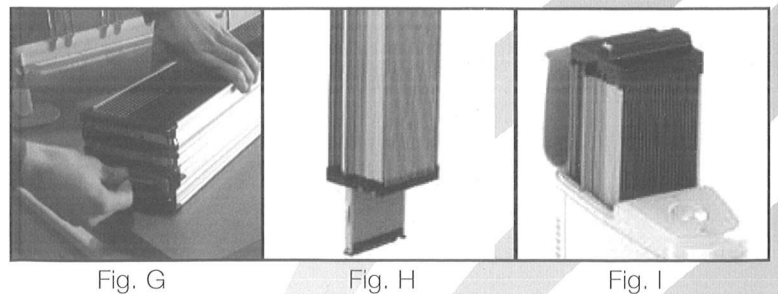

For detailed instructions on replacing your ionizer wire, please visit the YouTube page.

<https://www.youtube.com/IonicComfortPlus>