

SHARPER IMAGE®

Battery Operated Indoor/Outdoor Wreath Item No. 203163

Congratulations on your purchase of the Battery Operated Indoor/Outdoor Wreath. This product is designed for many seasons of enjoyment. Please read the following guide carefully and retain for future use.

FEATURES

- 30" diameter
- Indoor or outdoor use
- Cordless and portable
- 200 tips
- Pre-decorated with pinecones and berries
- 2 sturdy metal backing rings
- 50 long-lasting warm white LED lights
- Automatic timer: 6 hours on / 18 hours off
- Requires 3 D (1.5V) batteries (not included)

OPERATION

- Install 3 D batteries. Ensure that batteries are inserted with the correct polarity, by following the diagram in the battery case. (See Fig. 1)
- Push the button once to turn on the lights and directly enter timer mode. In timer mode, the lights will run continuously for 6 hours, then turn off for 18 hours. The cycle will repeat at the same time every day (6 hours on, 18 hours off) until the batteries expire or until you turn off the light and timer.
- Push the button again to turn off the light and timer.

Please note: This item has no replaceable or user-serviceable parts.

SAFETY WARNING

- Keep out of reach of young children.
- Insertion, removal and disposal of batteries should be done under adult supervision.
- Use only the batteries specified.
- Ensure that batteries are inserted with the correct polarity.
- Remove batteries when item is not in use.
- Do not mix different types of batteries.
- Do not mix old and new batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Do not short-circuit the supply terminals.

PROPER DISPOSAL

Please recycle all packaging where possible and dispose of expired batteries in an environmentally responsible manner. Contact your local authorities for recycling and disposal information.

CUSTOMER SERVICE

If you require any additional assistance with your Battery Operated Indoor/Outdoor Wreath, please call 1 (877) 714-7444 and select Option 3.

FIG. 1

