

SHARPER IMAGE®

Waterproof Battery Operated Massager
Item No. 203175



PAGE 1

Congratulations on your purchase of the Waterproof Battery Operated Massager. This product is designed for many years of enjoyment. Before using, please read the following guide carefully and retain for future reference.

 
NOTE: Always consult your physician before using any home massage product.

FEATURES

- Cordless, lightweight design
- Ideal for home or travel
- Waterproof construction
- Powerful motor with three adjustable levels of vibration
- Low: 4700 rpm / Medium: 5100 rpm / High: 6500 rpm
- Whisper-quiet operation
- Soft and flexible massage head
- Ergonomic shape
- Single-switch operation
- Requires 4 AAA batteries (not included)

OPERATION


- Open the battery compartment by twisting the handle in a clockwise direction, then separating the two halves.



- Insert 4 AAA batteries, following the direction indicated inside the battery compartment.

PAGE 2

- Close the battery compartment and close it securely.
- This massager is equipped with a single button for easy operation:

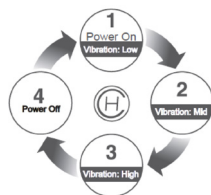

- Press the Power/Speed Button to turn the massager on to the lowest speed.
- Press the Power/Speed Button to increase speeds through the three intensity levels.
- Press the Power/Speed Button to turn the massager off after the highest speed.

NOTE: In order to avoid water damage, please ensure the battery container is closed securely before using.

SAFETY WARNINGS & MAINTENANCE

- Please consult your physician before using any home massage product.
- Consult your physician if you are pregnant, experiencing menstrual period, or have malignant tumors, spinal/back injuries, abnormal discharge, heart disease, high blood pressure, unknown swells or pains, or if you are recovering from surgery.
- Please stop operating this device if you become uncomfortable.

PAGE 3

- Do not use for more than 15 minutes continuously.
- Keep this unit clean and away from areas of high temperature.
- Do not clean this massager with alcohol or any liquid chemical cleansers.
- Keep out of reach of young children.
- Insertion, removal and disposal of batteries should be done under adult supervision.
- Use only the batteries specified.
- Ensure that batteries are inserted with the correct polarity.
- Remove batteries when item is not in use.
- Do not mix different types of batteries.
- Do not mix old and new batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Do not short-circuit the supply terminals.

SPECIFICATIONS

- Power: 4 AAA batteries (not included)
- Material: Body – ABS
- Massager head – PVC
- Dimension: 230x23x45mm, Weight: 250g
- Made in China

CUSTOMER SERVICE

If you require any additional assistance with your Waterproof Battery Operated Massager, please call 1 (877) 714-7444 and select Option 3.

PAGE 4