


SHARPER IMAGE®

PERSONAL MASSAGER

Item No. 205025

Owner's Guide

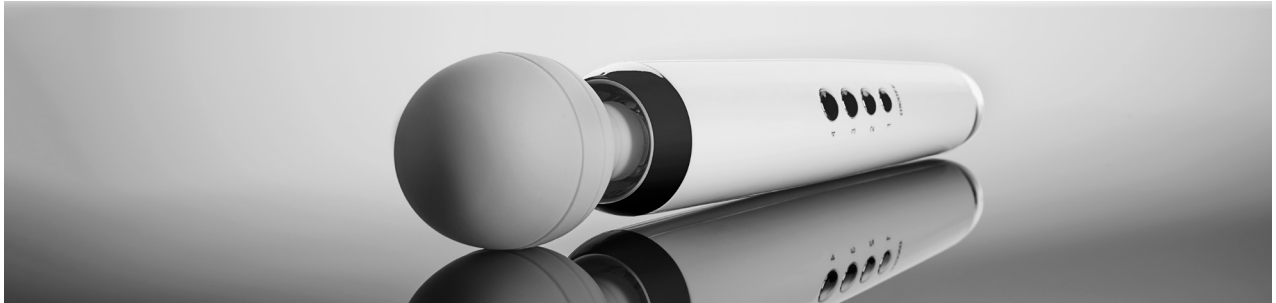

Thank you for purchasing the Sharper Image Personal Massager. This powerful wand massager soothes and relaxes tired muscles with four speeds and a soft, flexible head. Before using, please read this guide and store it for future reference.

FEATURES

- Professional strength wand massager
- Four vibration speeds:
 - Level 1: 3,500 rpm ["rapid pulse" mode]
 - Level 2: 4,200 rpm
 - Level 3: 5,000 rpm
 - Level 4: 6,000 rpm
- Soft, flexible head
- Extra-long, 8-ft. cable
- Recommended time of usage: 20 minutes [maximum]

OPERATION

1. Plug the Personal Massager into an AC outlet.
2. Press the ON/OFF button to turn the Personal Massager on. It will start on Level 1, the lowest speed [3,500 rpm, with rapid pulse action].
3. Press buttons 2 through 4 to adjust the vibration speed of the Personal Massager.
4. After the speed is selected, place the Personal Massager on the body area[s] where massage is needed.
5. Press the ON/OFF button to turn the Personal Massager off. *NOTE: The Personal Massager will turn off automatically after 20 minutes of consecutive usage.*

SAFETY WARNINGS

- Keep out of reach of children at all times.
- Do not use near water. Do not use in the bathtub or shower. Do not immerse in water or any other liquid.
- Always unplug the Personal Massager when not in use.
- Do not use this product on the head, eyes or other sensitive areas.
- Do not use this product on skin that is swollen, inflamed or abnormal.
- To avoid overheating, do not use this product under blankets, pillows, etc.
- Consult your doctor prior to using this product if you have heart, skin or other health-related issues.
- If the soft head of this product becomes loose, stop using this product immediately. Contact Sharper Image Customer Service at 1 (877) 210-3449.
- If the powder cord appears worn, frayed or damaged, do not use this product. Contact Sharper Image Customer Service at 1 (877) 210-3449.
- To prevent electric shock, burns, fires and other injuries:
 - Do not leave this product unattended. Unplug it when not in use.
 - Do not operate this product in an excessively humid environment.
 - Do not use this product outdoors.
 - Keep the power cord away from heat sources.
 - Do not disassemble this product. There are no user-serviceable parts.

PRODUCT SPECIFICATIONS

Unit Size:	12.2" L x 2.4" W x 2.4" H
Unit Weight:	1.4 lbs.
Length of Cable:	98.5"
Alternating Voltage:	120V
Frequency:	60HZ

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. For Customer Service, please call 1 (877) 210-3449.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.