

SHARPER IMAGE®

NOSE AND EAR HAIR TRIMMER

Item No. 205807

User Guide



Thank you for purchasing the Sharper Image Nose and Ear Hair Trimmer. This product is designed for many years of good grooming. Before using, please read the following guide carefully and retain for future reference.


IDENTIFICATION OF PARTS

- A. Trimmer Head
- B. On / Off Switch
- C. Protective Cap
- D. Battery Cover

HOW TO INSERT BATTERIES

- Turn the battery compartment cap clockwise to open.
- Insert 1 AA battery [included] as shown, making sure the (+) and (-) markings on the battery match those inside the battery compartment.
- Replace the battery compartment cap and turn it counterclockwise to lock in place.

NOTE: Do not use rechargeable batteries with this device. The lower voltage in recharged batteries may impair the performance of the cutting unit.

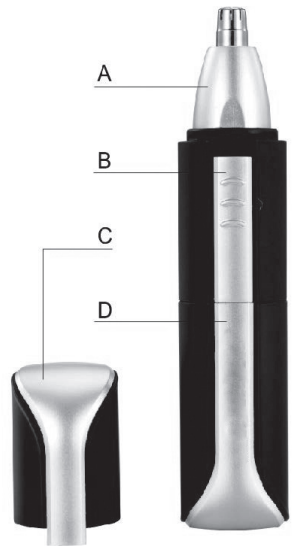

OPERATING THE NOSE AND EAR HAIR TRIMMER

- Turn the groomer ON.
- Insert groomer's cutting tip gently into the nostril or ear.
- Rotate the groomer in a circular motion around the opening of the nostril or ear, gently moving it in and out as you rotate.

WARNING! Be sure the product is turned on BEFORE it makes contact with ear or nose hair. Do not insert the device more than 1/4" into your nose or ear.

GROOMING TIPS

- Trim nose and ear hair in a well lit area.
- Use a magnifying mirror if possible.
- Gently lift up the tip of your nose to help you see hairs that need trimming.
- Do not overtrim. Nose hairs are an important part of your immune system because they trap airborne substances like germs and dust. Trim only the nose hairs you can see.

CARE AND MAINTENANCE

- For best results, clean this device regularly.
- Remove the Trimmer Head and rinse it under warm water.
- Do not use hot water, as this may damage the attachment.
- Do not use harsh chemicals or cleaners.
- Allow to air dry or use a hair dryer on cool or medium setting.

SAFETY INSTRUCTIONS

- Keep this device out of the reach of children.
- Store this device away from heat sources.
- Do not use this device if it becomes damaged.
- Do not attempt to open or repair this device. There are no user-serviceable parts.
- Do not immerse in water or other liquid.
- Do not use this device in the bath or shower.
- If you will not use this device for an extended period of time, please remove the battery to

WARRANTY/CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 [877] 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.