

# SHARPER IMAGE®

## POP-UP LED SNOWMAN

Item No.205974

Owner's Manual

Thank you for purchasing the Sharper Image Pop-Up LED Snowman.  
Please read this guide carefully and keep it for future reference.

### WARNING


- This is an electric product – not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- Do not use this product for anything other than its intended use.
- Do not use or attach any additional electric lights or light strings to this decoration.
- This seasonal-use product is not intended for permanent installation or use.
- Do not mount or place this decoration near gas or electric heaters, fireplaces, candles or other similar sources of heat.

### CAUTION

- This product is suitable for indoor and outdoor use.
- The lights are non-replaceable.
- Keep away from any source of flame or heat.
- This is a holiday decoration. This is not a toy. Keep out of reach of small children.
- Do not connect this decoration to another electric decoration or light string.

### ASSEMBLY AND OPERATION

- Carefully remove the metal tubes, base and Snowman from the box.
- Choose a firm, flat surface on which to assemble the snowman.
- Make sure it is not plugged in while assembling the product.
- Connect the metal tubes and place into the base.
- Use the hook on the bottom case hook on bottom of the snowman.
- Install left and right hand well.
- Carefully drape the snowman over the top of the connected metal poles.
- Plug the power cord into an AC outlet. The LEDs are now lit.

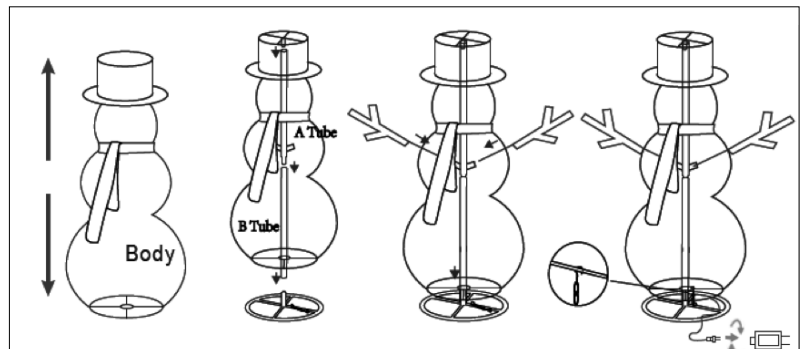

## ASSEMBLY AND OPERATION [CONT.]

*NOTE: When displaying this Snowman outdoors, use the provided ground stakes to secure the product firmly in the ground.*

## MAINTENANCE AND CARE

- Before use or reuse, inspect the Snowman carefully. Discard the Snowman if it has cut, damaged or frayed wire insulation on cords, cracks on the bulb holders or enclosures, loose connections or exposed copper wire.
- When not in use, store the Snowman neatly in a cool, dry location protected from sunlight.
- Unplug the Snowman when leaving the house, when retiring for the night, or any time it is left unattended.

## IF LIGHTS DO NOT WORK

- Please check for loose wires.
- Ensure the power outlet is working correctly.
- Ensure the plug is connected properly between the Snowman and the AC outlet.

## FCC NOTICE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from [SharperImage.com](http://SharperImage.com) include a 1-year limited replacement warranty. For Customer Service, please call 1 (877) 210-3449.

# **SHARPER IMAGE®**

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.