

# SHARPER IMAGE®

## COMPACT RETRO FRIDGE

Item No. 206655

User Guide



Thank you for purchasing the Sharper Image Compact Retro Fridge. Please read this guide carefully and store it for future reference.

### FEATURES

- All-in-one cooler and food/beverage warmer
- Solid-state thermoelectric cooling keeps beverages at the perfect temperature [32° F below ambient temperature]
- Heats your food/beverages up to 135° F
- Features a lightweight design
- Store up to 12 cans or nine 16 oz. [500 ml] water bottles
- Eco-friendly
- Perfect for home, office, desk, bedside, RV or car
- Easy portability with folded carrying handle
- Available in Red, Silver, Black or White
- Includes AC adapter and car adapter

### HOW TO USE

- Before operating, connect the plug into the socket on the back of the Compact Retro Fridge then connect the other end into a power outlet.
- Slide the switch on the back of the unit to COOL or WARM.
- When using the cooling function, the LED light will illuminate green and when using the warming function, the LED light will illuminate red.
- To turn the unit off simply flip the switch on the back of the unit to off. The unit will then function as an insulated box.

**Note:** To power on in a car, plug the unit into a cigarette lighter or connect it to a 12V storage battery.

## WARNINGS

- When alternating between the cool and warm functions, turn the switch to OFF first. After 30 minutes, turn it to COOL or WARM.
- When using the warming function, use care when handling hot items to avoid burns.
- To save energy when using in a car, pull the plug out of the cigarette lighter when the car is stopped and shut off.
- Keep the fan on the unit free of obstructions to keep it from getting jammed.
- Check to make sure the power cords and sockets are tight before use. Loose sockets and cord can result into a fire.
- Keep the unit away from flammable items and damp areas to prevent an explosion or fire.
- Do not rinse with water.
- Don't switch the function from cool to warm abruptly. Switch the function after 30 minutes of being on OFF.
- Do not put the unit upside down.
- DO not drop or shock the unit.
- The unit can be used up to 10 hours. Overuse will cause damage.

## STORAGE AND DISPOSAL

- Store the unit in a cool and dry place out of reach from children and pets.
- Keep the packaging for transporting the unit or for storing when not in use for a prolonged period.
- Do not dispose of this item along with other household waste, as electrical and electronic waste must be disposed of separately.

## WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. For Customer Service, please call +1 [877] 210-3449.

**SHARPER IMAGE®**

The SHARPER IMAGE® name and logo are registered trademarks.  
©Sharper Image. All Rights Reserved.