 


HUNGRY CHAMELEON

 
6+

OPERATING INSTRUCTIONS


Carefully remove items from package.

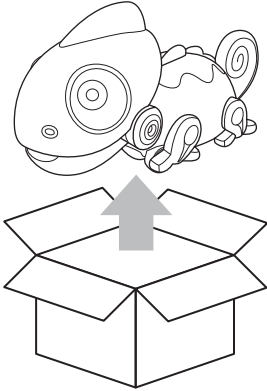

Robo Chameleon already includes 4 "AA" 1.5V zinc carbon batteries installed in the battery case in his belly. For best performance, these should be replaced by fresh batteries. Use a Phillips head or Cross screwdriver to remove the screw securing the battery cover plate. Insert fresh batteries following the diagram inside the battery tray. Replace the battery cover and secure with the screw.

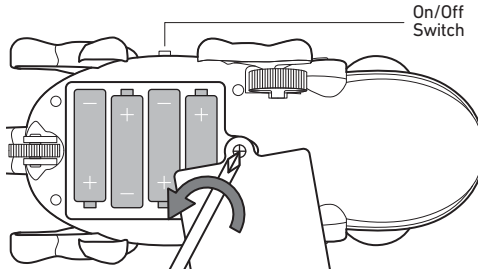

 The remote requires 2 "AAA" 1.5V alkaline batteries. Use a Phillips head or Cross screwdriver to remove the screw securing the battery cover plate on the back of the remote control. Insert the batteries in the correct direction and replace the battery cover. Tighten the screw.

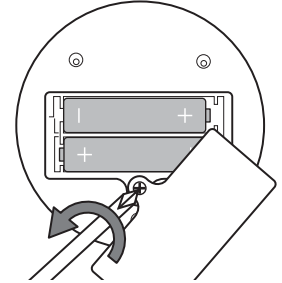


Before you start:


The Robo Chameleon's power switch is set to try-me mode. Slide the switch to the OFF position before proceeding.

How to Play:

 Set Robo Chameleon on a hard, flat surface and slide the power switch to ON. He'll wag his tail, spin his eyes, and start changing colors showing that he's ready to play.

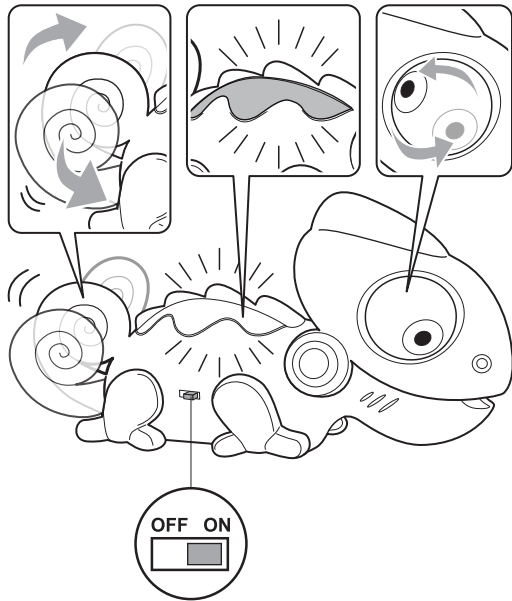


Direction

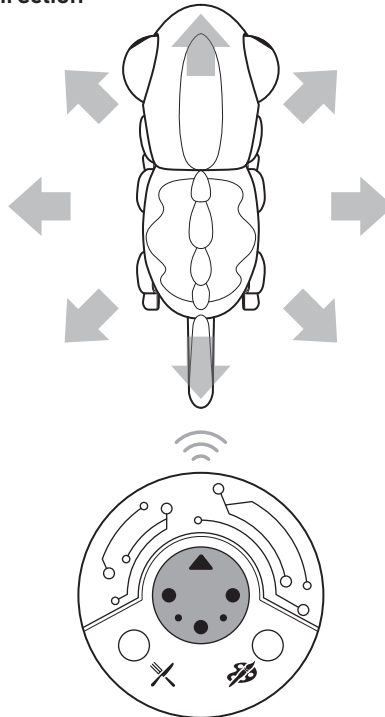 

For best performance, point the remote directly at the Chameleon.

 Feed

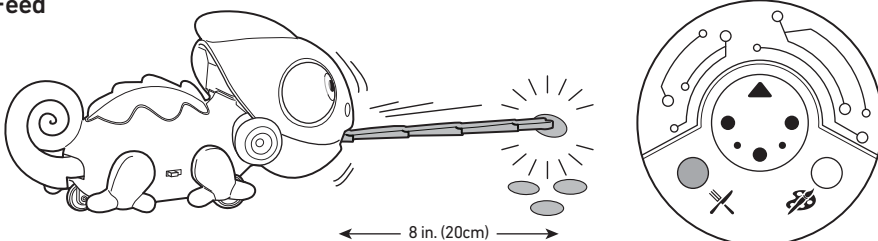

Change Colors



SAFETY WARNINGS

PLEASE READ ALL SAFETY WARNINGS BEFORE USE

- Do not operate during thunderstorms or rain.
- Avoid water, sand and snow when operating Robo Chameleon.
- Do not submerge Robo Chameleon or controller in water.
- Never operate Robo Chameleon on the street or highway.
- Never operate Robo Chameleon in a confined or crowded area. Do not use people or animals as obstacles.
- Do not run Robo Chameleon into furniture objects or hard surfaces as this will cause damage to both the objects and Robo Chameleon.
- Keep fingers, hair and loose clothing away from the tires, gears and motor while Robo Chameleon is switched ON.
- Do not leave Robo Chameleon or remote near sources of heat or under direct sunlight for long periods of time.
- Do not leave Robo Chameleon or remote outside overnight. Dampness is harmful to interior components.
- Remove all batteries when not in use to avoid accidental operation.
- Adult supervision is recommended when operating Robo Chameleon.

ALKALINE BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not charge with non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in fire, batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The artwork and design of this package are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. It is not permitted to alter, remove or reproduce any trademarks or copyright notice from this package.

©2018 Sharper Image. Sharper Image® name and logo are registered trademarks. All rights reserved. Distributed by MerchSource, LLC, Irvine, CA 92618.

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

FOR TECHNICAL SUPPORT, PLEASE CALL

1-800-374-2744

NOTE: Fluorescent lights and sunlight can affect Robo Chameleon's ability to receive signals from the remote.