



 **THERMO GLOVES**
Instructions

 **THERMO GLOVES**
Mode d'emploi



- Micro-thin stretchable carbon fibre
- Tissu élastique extrêmement fin avec des fibres de carbone



- Stretchable Polyester material
- Tissu élastique en polyester

- ON/OFF keypad with temperature control
- Bouton ON/OFF avec régulation de température

- Power cable with plug for battery connection
- Câble avec douille pour le raccordement de la batterie

- Light-weight (59 gram) Li-Ion Polymer battery
- Batterie Li-polymère petite et légère (59 grammes)

- Battery pouch with zipper
- Poche pour la batterie avec fermeture éclair

**CONTENTS:**

- 2 Heated Gloves with 2.700 mAh Li-Ion Polymer batteries
- 1 Adapter
- 1 Storage and travel pouch
- 1 Instruction booklet

Technical Specifications:

- 2.700 mAh Li-Ion Polymer battery
- Heating time up to 5 hours
- Temperature: Adjustable from 34°C - 44°C / 93°F - 111°F

**CONTENUTO:**

- 2 Gants chauffants
- 1 chargeur
- 1 housse de rangement
- 1 mode d'emploi

Donnees Techniques:

- Batterie Li-ion polymère de 2.700 mAh
- Durée de chauffage jusqu'à 5 heures
- Températures réglables de 34°C à 44°C



HEATED GLOVE LINER INSTRUCTIONS

Unpack the **THERMO GLOVES**, along with the two Li-Ion Polymer batteries and adapter.

The batteries of the **THERMO GLOVES** are not charged and must be fully charged for 8 hours before first use.

Connect two adapter cables to the sockets of the batteries. Then plug in the adapter to the outlet to charge the batteries. Both batteries must always be charged at the same time!

After the initial charge, the regular charging time is approximately up to 8 hours depending on the charging state of the batteries. The adapter is designed to protect and guarantee a long life of the batteries. Overcharging is not possible.

The LED light on the adapter turns to red during loading and then changes to green after loading is completed. After the gloves are fully charged, unplug the adapter and disconnect the cables from the batteries. Store the batteries in the pouch inside the cuff of the gloves and close the zipper.

When using your **THERMO GLOVES** open both zippers of the pouch inside the gloves and connect the cables, which are inside the pouch, to the sockets of the battery firmly. Store the battery inside the pouch and close the zipper.

The Heating Mode is activated by pressing the black ON/OFF keypad control button located on the top of the gloves for about 3 seconds. The LED light on the keypad control will then flash and light up, indicating that the gloves are in the Heating Mode.

The temperature can be adjusted by pressing and releasing the keypad control button.

L - Green LED (34°C/ 93°F with approximate heating time of 4 – 5 hours)
M - Yellow LED (39°C/ 102°F with approximate heating time of 3 – 4 hours)
H - Red LED (44°C/ 111°F with approximate heating time of up to 2 hours)

Please note that the actual heating time always depends on the outside temperature and if the gloves are worn separately, or in conjunction with outer gloves or mittens. The Li-Ion batteries reach its full power after having been fully charged and fully drained several times! Additional batteries packs can be purchased separately if extended heating times are needed!

Turn OFF the gloves by pressing the ON/OFF keypad control button several seconds until the LED light turns off. Always unplug the batteries when the gloves are not in use and store them inside the pouch of the glove.

The high-quality 2.700 mAh Li-Ion Polymer Batteries (no memory effect!) cannot be damaged by frequent charging and can be re-charged approximately 500 times!

STORAGE:

For best performance it is recommended not to fully charge the batteries if the gloves are not being used for a longer period of time! Charge for 30 minutes only and after 3 months charge the batteries again for about 30 minutes!

Charge the batteries completely before using the gloves again.

CARE INSTRUCTIONS:

- Turn OFF the gloves when not in use.



- Always unplug the batteries when the gloves are not in use and store them inside the pouch of the glove.
- Store the gloves and adapter in a cool, clean and dry place.
- Only use the original adapter to charge the gloves.
- Do not damage the heating elements by excessively stretching or twisting the gloves.
- Do not cut or puncture the gloves.
- The temperatures were measured directly at the carbon fiber material.
- Do not dry clean.
- Do not iron.

The indicated temperatures are measured directly at the carbon fiber close to the battery.

WASHING INSTRUCTIONS:

- Hand wash only! Please use a mild detergent and treat the gloves carefully.
- Air-dry the gloves only! Do not place them on radiators or any other hot surface!
- Let the gloves dry completely before charging again.

HELPFUL INFORMATION:

Please perform the following test in case you feel that the gloves are not heating correctly:

- Charge the gloves completely.
- Now turn ON the gloves by pressing the ON/OFF keypad control button about 3 seconds until the LED light turns on!
- Place the gloves in the refrigerator for 5 – 10 minutes.
- Check the LED light of both gloves after taking them out of the refrigerator again.
- If the light is ON, then the gloves are in the heating mode and you should feel the warmth on the fingers and also the upper side of the gloves after about one minute.

DISCARDING OF THE GLOVES:

Discard **THERMO GLOVES** with approved collection agencies only! In order to save our environment, do NOT dispose the gloves in your normal household trash. Discard the batteries separately from the gloves!

DISPOSAL INFORMATION referring to § 18 BATTG

According to § 18 BATTG we are obliged to make you aware of the following information regarding the disposal of rechargeable batteries and chargers: Batteries and chargers can not be disposed in your normal household trash and you have the legal obligation to return used batteries and chargers accordingly. Used batteries may contain toxic substances, which could affect the environment or your health if they are disposed improperly or stored incorrectly. Batteries also contain important raw materials, such as iron, zinc, manganese or nickel, which can be recycled. You can either return the used batteries to us, or you discard them at the retail market or at communal collection points free of charge. The crossed trash can indicates that the batteries must not be disposed in the normal household trash. Additionally you find further symbols with the following meanings:

Pb: Battery contains lead

Cd: Battery contains cadmium

Hg: Battery contains quicksilver

If you want to dispose the batteries, please separate the fabric cover from the battery.



THERMO GLOVES

MODE D'EMPLOI DES GANTS THERMO GLOVES

Retirer les gants **THERMO GLOVES**, le chargeur et les batteries de l'emballage. Les batteries ne sont pas chargées et doivent être chargées pendant 8 heures avant la première mise en service.

Introduisez les 2 fiches du chargeur dans les douilles des 2 batteries. Attention: les 2 batteries doivent toujours être chargées simultanément.

Après le premier chargement, la durée du chargement sera environ de 8 heures. Les LED sur le chargeur sont rouges pendant le chargement et deviennent verts quand les batteries sont complètement chargées. Retirez les 2 fiches des batteries et gardez les batteries dans les poches prévues à l'intérieur des gants. Fermez la fermeture éclair.

Pour la mise en service des gants **THERMO GLOVES**, ouvrez la fermeture éclair du gant et reliez les 2 fiches avec les douilles des 2 batteries. Remettez ensuite les batteries dans les poches prévues et fermez la fermeture éclair.

Le chauffage est activé si vous appuyez pendant au moins 3 secondes sur le bouton noir en silicone ON/OFF qui se trouve sur le dos du gant. Le voyant LED sur le bouton en silicone s'allume pour confirmer la fonction de chauffage.

La température peut être réglée en appuyant sur le bouton en silicone ON/OFF:

- L – LED vert (34°C/ 93°F et une durée de chauffage de 4 – 5 heures)
- M – LED jaune (39°C/ 102°F et une durée de chauffage de 3 – 4 heures)
- H – LED rouge (44°C/ 111°F et une durée de chauffage jusqu'à 2 heures)

La durée de chauffage des gants **THERMO GLOVES** dépend des températures environnantes, mais également si les gants sont portés avec ou sans sur-gants. Si une durée de chauffage plus longue est nécessaire, il est possible de commander séparément des batteries supplémentaires. Le chauffage est arrêté si vous appuyez pendant au moins 3 secondes sur le bouton en silicone ON/OFF situé sur le dos du gant. Le voyant LED s'éteint alors.

Après utilisation, retirez toujours les 2 fiches des batteries et conservez les batteries dans les poches prévues à cet effet dans le gant. Refermez la fermeture éclair. Les batteries Li-ion polymères n'ont pas d'effet mémoire et peuvent être rechargées jusqu'à 500 fois.

STOCKAGE:

Si les gants **THERMO GLOVES** ne sont pas utilisés pendant une longue période, il est conseillé de ne pas les charger complètement. Ne chargez les batteries que pendant 20 minutes environ, et après 3 mois une nouvelle fois pendant 20 minutes. Avant de réutiliser les gants pour une nouvelle saison, il faut les charger complètement.



AUTRES CONSEILS:

- Il faut toujours désactiver les gants après utilisation.
- Retirez les 2 fiches des batteries et conservez les batteries dans les poches prévues à cet effet dans les gants.
- Stockez les gants et le chargeur dans un endroit frais et sec.
- Il est impératif de ne charger les batteries qu'avec le chargeur d'origine.
- Il est conseillé de ne pas exercer de fortes tractions sur les gants pour éviter d'endommager les éléments chauffants.
- Ne pas manipuler les gants avec des objets coupants ou pointus.
- Ne séchez qu'à l'air ambiant. Ne pas poser sur un appareil de chauffage.
- Si les gants sont humides, laissez-les sécher avant de les charger.
- Les températures indiquées ont été mesurées directement à la fibre de carbone à la batterie.

Instructions de lavage:

- Lavage à la main seulement permis! Utilisez un détergent doux et traitez les gants soigneusement.
- Ne séchez qu'à l'air ambiant. Ne pas poser sur un appareil de chauffage.
- Si les gants sont humides, laissez-les sécher avant de les charger.

CONSEILS EN CAS DE PROBLEME:


Si vous pensez que les gants ne chauffent pas, faites le test suivant:

- Chargez les 2 batteries simultanément
- Reliez les 2 fiches qui se trouvent dans le gant aux douilles des 2 batteries. Remettez les 2 batteries dans les poches prévues à cet effet dans les gants et fermez la fermeture éclair.
- Le chauffage est activé si vous appuyez pendant au moins 3 secondes si le bouton noir ON/OFF en silicone qui se trouve sur le dos du gant. Le voyant LED sur le bouton en silicone est allumé, ce qui confirme la fonction de chauffage.
- Mettez les gants pendant 5 à 10 minutes dans le réfrigérateur
- Observez alors le voyant LED sur le bouton en silicone ON/OFF des 2 gants.
- Si le voyant est allumé, cela signifie que les gants chauffent et vous pouvez sentir cette chaleur aux doigts, ainsi que sur la partie supérieure des gants après environ 1 minute.

MISE AU REBUT:

Jeter votre **THERMO GLOVES** uniquement auprès des services de collecte de déchets agréés! Afin de protéger l'environnement, ne pas jeter le couvre-siège ni la batterie dans votre poubelle ménagère.

Jeter la batterie séparément!

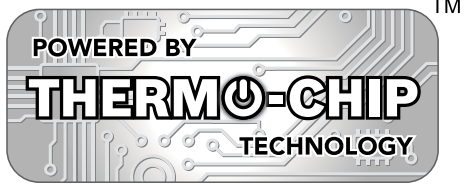

European Design
Made in China

Design européen
Fabriqué en Chine